



IMPORTANT NOTICE
CALL UNDERGROUND SERVICE ALERT
TOLL FREE 1-800-422-4133
TWO WORKING DAYS BEFORE YOU DIG

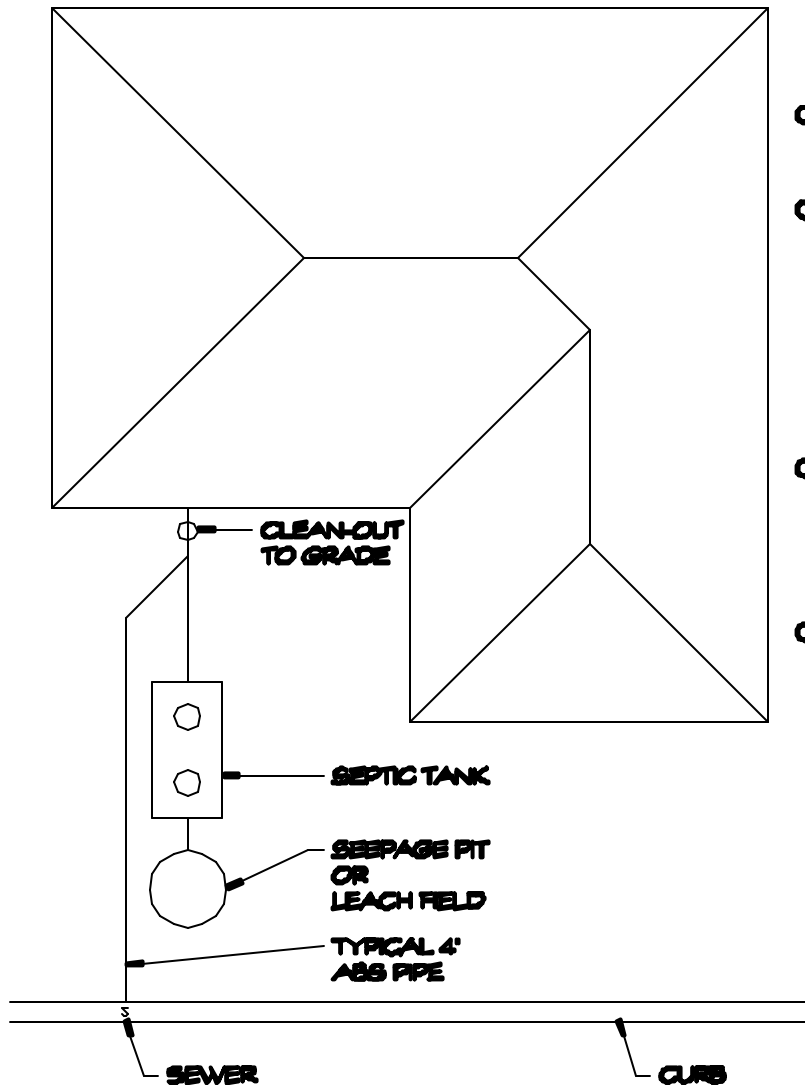

- FIRST INSPECTION:**
- DISCONNECT FROM TANK AND TIE IN TO SEWER
 - HAVE TANK, SEEPAGE PIT AND/OR CESSPOOL PUMPED OF WASTE AND COMPLETELY FILLED WITH EARTH, SAND, GRAVEL, OR OTHER APPROVED MATERIAL
 - LEAVE LIDS OFF UNTIL AFTER INSPECTION

- SECOND INSPECTION:**
- CALL FOR FINAL AFTER ALL BACK FILLING IS COMPLETED AND LANDSCAPING IS REPLACED.

PINK JOB CARD TO BE ON-SITE FOR ALL INSPECTIONS.
PIPE TO BE INSTALLED AT 1/4" PER FOOT FALL.
CLEAN-OUT IS REQUIRED IN FRONT OF BUILDING AND EVERY 100 FEET, OR AT EACH 135° CHANGE OF DIRECTION.

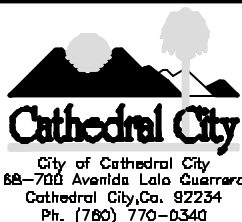

**TYPICAL REQUIREMENTS FOR
 RESIDENTIAL SEWER HOOKUP
 FROM EXISTING SEPTIC TANK**

BUILDING DEPARTMENT

Scale: N.T.S.
 Date: 9/17/2002
 Sheet: 1 of 1 Sheets
 Drawn By: KSL
 Checked By: —